

# Honeywell Voyager 1450g Barcode Scanner Configuration for LDMS

By default, LDMS barcodes prefix their data with a special symbol called a control character. To configure the Voyager 1450g barcode scanner to communicate the control character to the LDMS correctly, follow the instructions below.

## Setup for LDMS

Scan the following two codes to put the scanner in a mode that is compatible with LDMS barcode labels. Scan the codes from left to right.



DEFAULT.  
**Activate Defaults**



KBDCAS1.  
**DOS Mode Control + X Mode On**

## Optional Volume Settings

By default, the scanner beep volume is set at “high”. This may be a little loud for an office environment. Scan one of the codes below for the desired “good read” beep volume.



BEPLVL1.  
**Low**



BEPLVL2.  
**Medium**



BEPLVL3.  
**\* High**



BEPLVL0.  
**Off**

## Need Help?

If you need help getting your barcode scanner to work, visit [www.ldms.org/contact](http://www.ldms.org/contact) or call (716) 834-0900 extension 7311.